



RoyalToiletry
Your Divine Bathroom

Floor Mounted Toilet Installation Instructions



Step 1: Turn Off the Water Supply

1. Locate the water shut-off valve near the toilet area and turn it clockwise to shut off the water.
2. Flush the old toilet if you're replacing one, and remove any remaining water using a sponge or towel.

Step 2: Remove the Old Toilet (if applicable)

1. Disconnect the water supply line using an adjustable wrench.
2. Unscrew the bolts holding the toilet to the floor.
3. Carefully lift and remove the old toilet; have a helper assist if needed.
4. Scrape off any old wax or putty from the flange on the floor to ensure a clean surface for the new ring.

Step 3: Prepare the Toilet Flange

1. Inspect the flange to ensure it's not cracked or damaged. If damaged, replace it before continuing.

Step 4: Install the seal (included)

1. Invert the new toilet on floor (use cushion, fabric etc to prevent damage).
2. Install the pvc seal that's in the box evenly around the toilets drain hole by tightly pressing the seal against the bottom of the toilet.



Please Note!

Royal Toiletry offers designer toilets that are crafted mostly without traditional tightening bolts, allowing for a sleek and streamlined design. Thus, we recommend using the provided specialized PVC seals instead of standard wax rings to securely anchor the toilets to the floor, ensuring a leak-free installation.


Step 4: Attach the toilet to the floor

TOILET WITHOUT FLANGE BOLTS


1. Apply a thin bead of sealant around toilet base.
2. Place the toilet on the ground in place so the seal's opening goes inside the floor drain flange hole.
3. Remove any excessive silicone sealant with damp cloth.

TOILET WITH FLANGE BOLTS

1. Position new closet bolts on the flange, with their threads facing upward, turn 90° and slide into place 6" (152mm) apart and parallel to the wall. These bolts will secure the toilet to the floor.

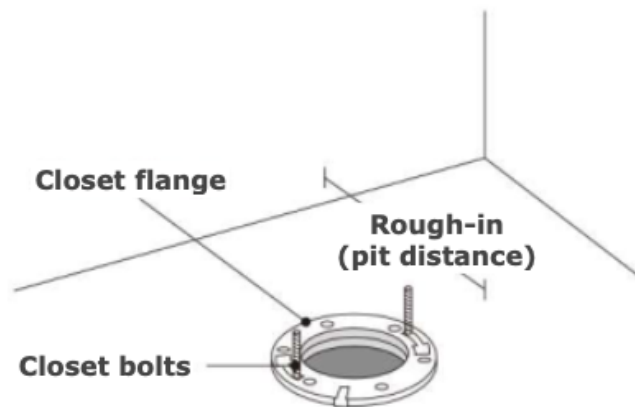

2. Install toilet on closet flange so bolts project through the mounting holes.

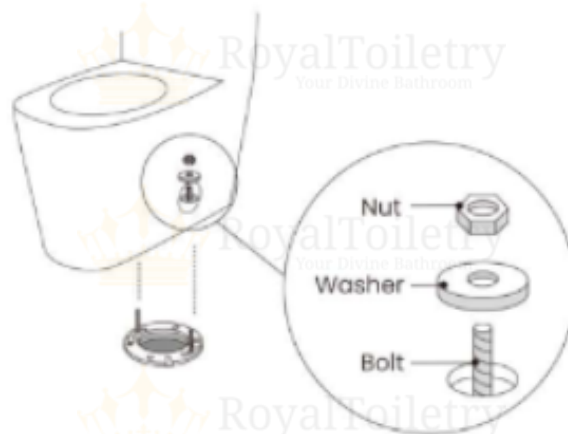

3. Add washers and nuts to the closet bolts and tighten them gradually and evenly using an adjustable wrench. Avoid overtightening, as this can crack the porcelain.
4. Loosely install retainer washer and nuts.

Step 6: Connect the Water Supply

1. Attach the supply line to the water inlet on the bottom of the tank.
2. Use Teflon tape on the threads if necessary to prevent leaks.
3. Connect the other end of the supply line to the shut-o valve.

Step 7: Check for Leaks and Test the Toilet

1. Flush the toilet a few times to check for leaks around the base and tank connections.
2. Adjust the water level in the tank if needed.

Step 8: Secure the Base with Caulk

1. Apply a bead of caulk around the base of the toilet for stability and to prevent water from seeping under the bowl.
2. Smooth the caulk with your finger or a caulk tool and allow it to cure as per the manufacturer's instructions.

Step 9: Final Checks and Tips

1. Recheck all connections for leaks after a few hours.
2. Avoid using the toilet for at least 24 hours to allow the caulk to cure fully.
3. If the toilet rocks slightly, use shims to stabilize it before applying the final caulk bead.

Your Royal Toiletry floor-mounted toilet is now successfully installed and ready to serve you !

If you have any additional questions, please feel free to reach out to us via email or our royaltoiletry.com chat—our experts are available online to assist you.

Royal Toiletry Global